


episode

INSTALLATION MANUAL
EA-MINI-SUB-1D-100

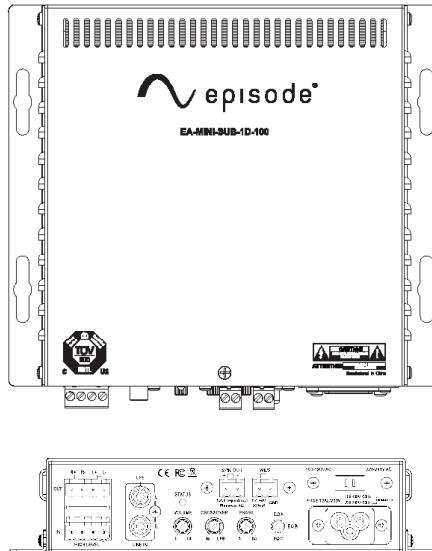

REAL. LIFE. SOUND.



	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">Risk of Electrical Shock! DO NOT OPEN!</p> <p style="text-align: center;">ATTENTION ! RISQUE DE CHOC ! ÉLECTRIQUE PAS OUVRIR !</p>	
	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.	

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide bladed or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. The equipment shall be used at maximum 35°C ambient temperature.
16. To reduce the risk of electrical shock, do not open the equipment. For safety reasons it is only allowed to be opened by qualified service personnel.
17. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Additionally, the apparatus shall not be exposed to dripping or splashing and no objects filled with liquids shall be placed on the apparatus.
18. The MAINS plug is used as the disconnect device and shall remain readily operable.
19. The product shall be used on open bench.
20. No naked flame sources, such as lighted candles, should be placed on the apparatus.
21. **WARNING:** This product may expose you to chemicals known to the State of California to cause cancer and reproductive harm. For more information go to www.P65Warnings.ca.gov.
22. The use of the apparatus is in moderate climates.

	Le flash de foudre avec le symbole de pointe de flèche, dans une triangle équilatérale, est prévu pour alerter l'utilisateur à la présence de la tension dangereuse non isolée dans la clôture du produit qui peut être de la grandeur suffisante pour constituer un risque de décharge électrique aux personnes..
	Le point d'exclamation dans une triangle équilatérale est prévu pour alerter l'utilisateur à la présence des instructions importantes de fonctionnement et d'entretien (entretien) dans la littérature accompagnant l'appareil.


CONSIGNES DE SÉCURITÉ IMPORTANTES

Avertissement: Pour réduire le risque d'incendie ou un choc électrique, ne pas exposer cet appareil à la pluie ou à l'humidité.

1. Lisez ces instructions.
2. Conservez ces instructions.
3. Respectez tous les avertissements.
4. Suivez toutes les instructions.
5. Ne pas utiliser cet appareil près de l'eau.
6. Nettoyer avec un chiffon sec.
7. Ne pas bloquer les ouvertures de ventilation . Installer conformément aux instructions du fabricant.
8. Ne pas installer près de sources de chaleur telles que des radiateurs , registres de chaleur, poêles ou autres appareils (incluant les amplificateurs) qui produisent de la chaleur.
9. Ne pas contourner le dispositif de sécurité de la fiche polarisée ou de mise à la terre . Une fiche polarisée possède deux lames dont une plus large que l'autre . Une fiche de terre a deux lames et une troisième broche de mise à la terre . La lame large ou la troisième broche sont fournies pour votre sécurité . Si la fiche fournie ne rentre pas dans votre prise, consultez un électricien pour le remplacement de la prise obsolète.
10. Protégez le cordon d'alimentation ne soit piétiné ou pincé, en particulier au niveau des fiches , des prises de courant et le point de sortie de l'appareil.
11. N'utilisez que des fixations / accessoires spécifiés par le fabricant.
12. Utilisez uniquement avec le chariot, le trépied, le support ou la table spécifié par le fabricant, ou vendu avec l'appareil. Quand un chariot est utilisé, faites attention en déplaçant l'ensemble chariot/appareil pour éviter les blessures en cas de renversement.
13. Débranchez cet appareil pendant les orages ou lorsqu'il n'est pas utilisé pendant de longues périodes de temps.
14. Refer à un technicien qualifié personnel . Une réparation est nécessaire lorsque l'appareil a été endommagé de quelque façon que ce cordon d'alimentation ou la prise est endommagé , du liquide a été renversé ou des objets sont tombés dans l'appareil, l'appareil a été exposé à la pluie ou à l'humidité ,ne fonctionne pas normalement , ou s'il est tombé .
15. L'équipement doit être utilisé à une température ambiante maximale de 35°C
16. Pour réduire les risques d'électrocution, n'ouvrez pas l'appareil. Pour des raisons de sécurité, il est uniquement autorisé d'être ouvert par du personnel qualifié.
17. **AVERTISSEMENT:** afin de réduire les risques d'incendie ou de choc électrique, n'exposez pas cet appareil à la pluie ou à l'humidité. En outre, l'appareil ne doit pas être exposé à des gouttes d'eau ni à des éclaboussures et aucun objet ne doit être rempli de liquide doit être placé sur l'appareil.
18. La prise MAINS sert de dispositif de déconnexion et doit rester facilement utilisable.
19. Le produit doit être utilisé sur un banc ouvert.
20. Aucune source de flamme nue, telle que des bougies allumées, ne doit être placée sur l'appareil.
21. **AVERTISSEMENT:** ce produit peut vous exposer à des produits chimiques reconnus par l'état de la Californie comme pouvant causer le cancer et des problèmes de reproduction. Pour plus d'informations, visitez www.P65Warnings.ca.gov.
22. L'utilisation de l'appareil est dans les climats modérés.



AMPLIFIER

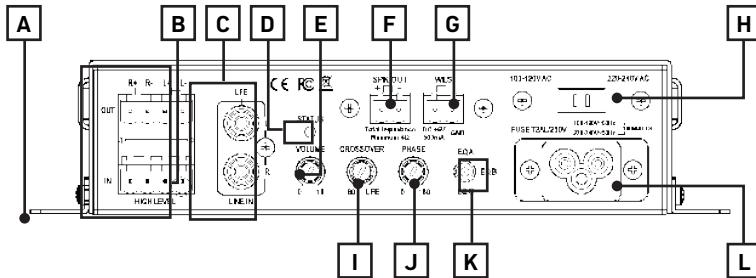

A. Mounting Ears

Mount the unit to a wall or rack using the mounting ears.

B. High Level Input and Output (for Speaker Wire)

For left/right connections from speaker cable runs.

C. Low Level Inputs (RCA)

For left/right or LFE connections from audio source. To connect LFE, use the L (left) channel.

D. Status LED

Red: AC power is present but the amplifier is in standby mode.

Blue: Power is on and signal is being received.

E. Volume Knob

Adjust subwoofer volume.

F. Speaker Output (Green)

Connect output to screw-down terminals.

G. 5V and Ground Connection

Connect 5VDC power for wireless kit.

H. Voltage Selector

Selects the appropriate input voltage setting: 120V or 230V

I. Crossover Adjustment Knob

Adjust the crossover frequency (limits the highest frequency the subwoofer will play). **Note:** Set the crossover knob to "LFE" if the LFE input is used.

J. Phase Adjustment Knob

Set the phase of the subwoofer in relation to the listening area.

K. EQ Settings

EQ Preset A: +4dB (optimized for enclosures > 4 cu. ft.)

EQ Preset B: +7dB (optimized for enclosures 1-4 cu. ft.)

EQ Preset C: +10dB (optimized for enclosures < 1 cu. ft.)

Note: See fine tuning section on page 8 for details on use of EQ setting

L. Power Connection

Connect the included cord for providing power.




SETUP

Amplifier Positioning

Placing the amplifier can have a large impact on performance and longevity. Please take the following guidelines into consideration.

- Ensure that the unit is in a well-ventilated area that provides adequate cooling.
- Do not block the cooling vents located on both sides of the unit.
- Do not place the unit on carpeting or any similar material.
- Do not install the unit near a source of heat, or in an extremely humid or wet location.
- If the installation lacks good air flow (such as solid cabinet doors or wallmounted racks), it may be necessary to create ventilation to allow outside air into the space.
- When placing on a cabinet shelf, position the unit with all feet resting on a solid, level surface.
- Allow a minimum of 5" of free air space above the unit.
- Allow a minimum of 3" of free air space on either side of the unit (does not apply to rack mounting).
- Allow a minimum of 2" of depth behind unit to accommodate cables and connectors

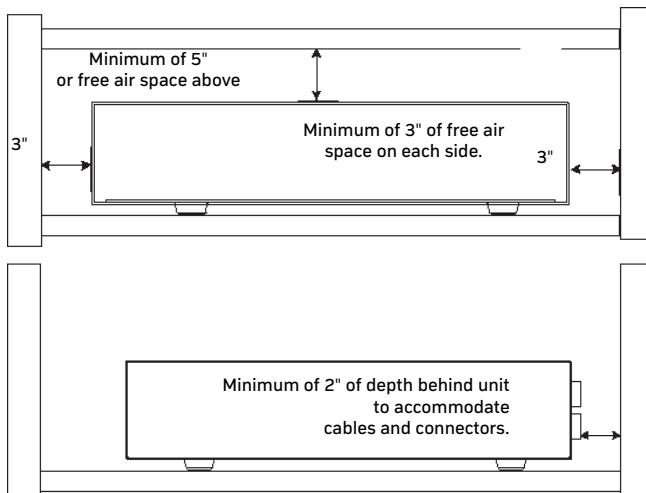



Wall Mount Installation

- Remove the four feet from the bottom of the chassis, if needed.
- Attach the included rack-mount ears to the sides of the amplifier chassis.
- Securely mount the amplifier into a mounting box.
- It is always wise to leave ventilation between components even though the amplifier produces very little heat.

Vertical Mounting (Walls or Enclosures)

- The amplifier may be mounted on any surface using fasteners (not included) suited for the surface material.
- The included module mounting pins may be used to secure the amplifier inside structured wiring enclosures.
- The rubber feet (included) can be attached to dampen vibrations if needed.

Horizontal Placement

- The rubber feet (included) can be used for shelf placement of the amplifier.
- Using these will prevent vibration and movement of the amplifier. Attach one to each corner of the unit.

WARNING: Do not stack anything on top of the amplifier



CONNECT

CAUTION: All connections and switching must be done with the amplifier turned off. Connect the power cord last to ensure that the amplifier is off during all the connections and set up.



RCA Line Level


⚠ Use high-quality RCA cables that feature low impedance with adequate shielding and high-quality connectors.

Speaker Outputs

Use 14-18 gauge stranded two-conductor speaker wire. Connect the appropriate conductor to each screw terminal, observing correct polarity.

⚠ CAUTION: When two subwoofers are connected in parallel, the nominal impedance of each subwoofer should not be less than 8Ω .

Single Sub Connections

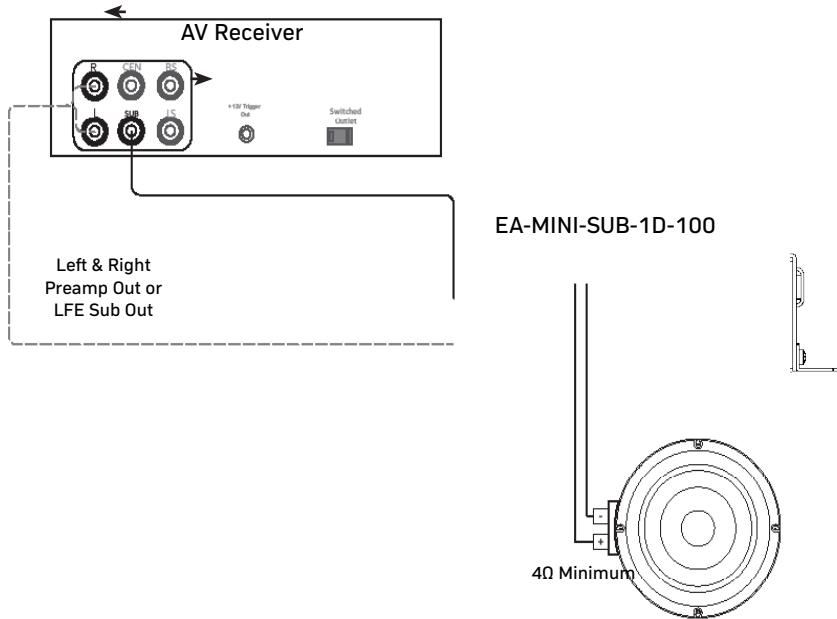



FINE TUNE


After making all connections and calibrating the speakers, fine tune the subwoofer as instructed below.

NOTE: When using an AV receiver and the LFE input, set the subwoofer calibration level to the factory setting.

1. Ensure that the subwoofer is plugged in.
2. Select one of the three preset EQs on the back of the amplifier. Preset EQs are optimized for use with ES-SUB-SNGL-8 in wall / in ceiling subwoofers. Choose the correct EQ setting depending on the air volumes behind the subwoofer. For example, smaller air volumes will have a larger bump in the EQ.

EQ PRESET A: +4dB (optimized for enclosures > 4 cu. ft.)


Example: ES-SUB-SNGL-8 in a free-air installation (no back box)

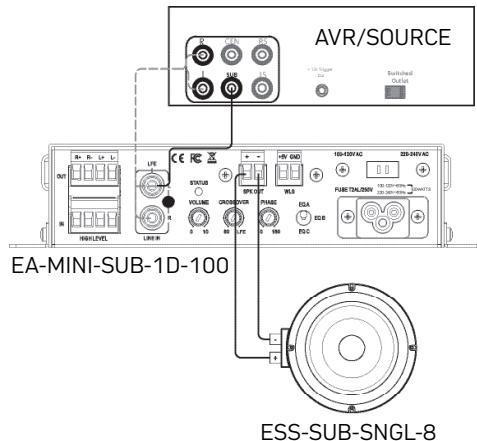




EQ PRESET B: +7dB (optimized for enclosures 1 to 4 cu. ft.)

Example: ES-SUB-SNGL-8 in a dual 8" pre-construction back box.

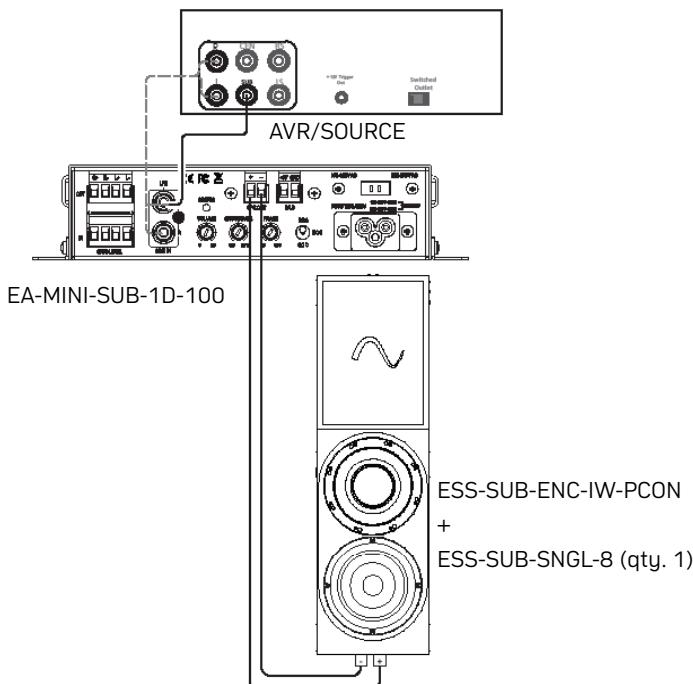

EQ PRESET C: +10dB (optimized for enclosures < 1 cu. ft.)

Example: ES-SUB-SNGL-8 in a pre-construction or retrofit back box.

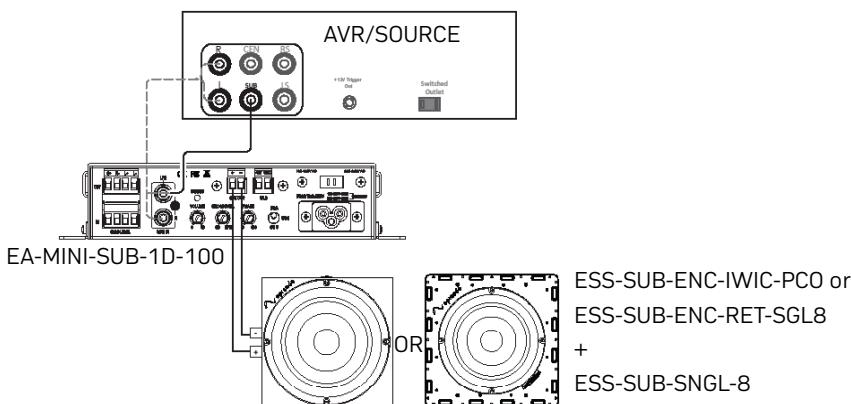



3. Set the controls to positions that will enable tuning for maximum performance.
VOLUME set to 50%, or 12 o'clock
CROSSOVER set to 175 Hz, or 12 o'clock – OR – set to 'LFE' if LFE input is used
PHASE set to 0°
4. Play a movie scene or music track and set the system volume to an average level. Listen to the bass level from the preferred listening position. Adjust the 'VOLUME' control as desired.
5. If deeper bass is desired, adjust the 'CROSSOVER' control toward the lower frequencies. Experiment with different frequency settings until finding one that sounds best.

NOTE: When using the LFE input, set to LFE and make any crossover adjustments in the preamplifier or receiver crossover settings.

6. Continue listening to music and movie sources using the settings chosen for volume and crossover.
7. Experiment with the phase until finding the best setting. Depending on the subwoofer's placement, the bass may sound louder or deeper when the phase has been optimized. In some cases, adjusting phase will make no discernible difference.

SPECIFICATIONS

Continuous Power Output	50 watts RMS at 8 ohms 100 watts RMS at 4 ohms
Speaker Input Max Pass Through	200 watts at 4 ohms
Input Sensitivity	140 mV for full output (L/LFE only driven), 100 watts, with level control set to max
Frequency Response	30-200Hz
Distortion	.10% THD+N 1W/2W 100 Hz
Auto On Sensitivity	4 mV
External Trigger Voltage	2.0 V - 20 V
Dimensions	6.68" W 1.75" H 7.11" D (front switch to rear chassis)
Weight	5.1 lbs



Certification

TUV Listed and tested under for US and Canada

TROUBLESHOOTING

Episode amplifiers are designed to function trouble-free. Most problems that occur are due to simple issues. If having trouble, check the list of simple fixes below. If the problem persists, contact Episode technical support at 866-838-5052.

	<ul style="list-style-type: none">• Power cable to the amplifier is incorrectly connected or plugged into an outlet that does not have power. Check connections and verify power at the outlet.• Audio cable to the source component is not connected properly, connection to output or the cable is defective. Check connections or replace cable with one that has been verified as good.• Amplifier is in standby mode and needs to be turned on (blue LED).• Check the connections of the speaker wire at both the speaker and amplifier.• The level adjustment is turned down. Slowly turn the dial to the right to raise the volume.
Hum or buzzing sound is heard	<ul style="list-style-type: none">• Check RCA input cables by removing them one at a time (powering down the amplifier before disconnecting) and verify connections.
Amplifier will not turn on	<ul style="list-style-type: none">• Ensure the amplifier is plugged into a live outlet.• Ensure an audio source is present.• Increase the source volume level.

WARRANTY AND LEGAL INFORMATION

Find details of the product's Limited Warranty and other safety, patent, and legal resources at snapone.com/legal or request a paper copy from Customer Service at **866.424.4489**.

CONTACTING TECHNICAL SUPPORT

As a thank you for purchasing Episode products, direct technical support services are available via phone or email. We encourage you to use this resource for any questions or concerns about our products. Visit our website for more support documentation.

(866) 838-5052

techsupport@snapone.com

snapone.com



Copyright ©2021, Snap One, LLC. All rights reserved. Snap One and its respective logos are registered trademarks or trademarks of Snap One, LLC (formerly known as Wirepath Home Systems, LLC), in the United States and/or other countries. 4Store, 4Sight, Control4, Control4 My Home, SnapAV, Araknis Networks, BakPak, Binary, Dragonfly, Episode, Luma, Mockupancy, Nearus, NEEO, Optiview, OvrC, Pakedge, Sense, Strong, Strong Evolve, Strong VersaBox, SunBriteDS, SunBriteTV, Triad, Truvision, Visualint, WattBox, Wirepath, and Wirepath ONE are also registered trademarks or trademarks of Snap One, LLC. Other names and brands may be claimed as the property of their respective owners. Snap One makes no claim that the information contained herein covers all installation scenarios and contingencies, or product use risks. Information within this specification subject to change without notice.