

engineered by  
**Snap**  
av

## OWNER'S MANUAL

## >> IN-CEILING TILE BRIDGE

### ES-TILEBRIDGE

#### IMPORTANT INSTRUCTIONS AND CONSIDERATIONS

- Read and understand all instructions.
- Before beginning installation, carefully plan locations accounting for potential electrical, plumbing or other obstacles.
- Contact a suitable contractor if you are unsure of how to best install.


#### GENERAL GUIDELINES

- Keep speakers about 2 feet away from corners and other surfaces that might interfere with or reflect sound, such as tall furniture.

### INSTALLATION


#### EXISTING CONSTRUCTION

- Choose a location for each speaker that is free of obstructions created by joists, HVAC ductwork, electrical wire runs, plumbing or anything else that might not allow for the depth of the speaker or create interference or noise.
- Once you have determined your locations, mark the hole to cut out for the speaker using the supplied template. Don't forget to allow for the size of the speaker bezel if you are choosing to install the speaker near a side wall or other item that could become an obstacle.
- If you are unsure of potential obstacles, carefully cut a small hole at an angle to the inside of the template line as illustrated. This will allow you to 'plug' the hole easily if needed. If the area is clear and is a good location for the speaker, go ahead and cut the edges of the opening at 90 degrees to accommodate the speaker diameter.

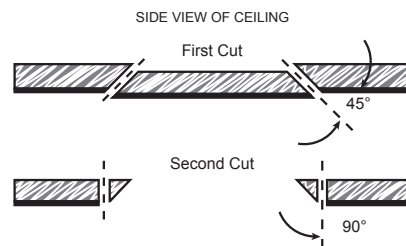

#### TILE BRIDGE

This tile bridge is to be used for installation in suspended ceilings or where reinforcement of the ceiling is needed. The tile bridge is universal and will work with many popular in-ceiling speakers. Place one piece on top of the ceiling tile on each side of the mounting hole as shown.

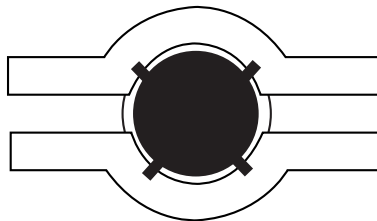

### SECURITY EYELET

Use the security eyelet on the tile bridge to install a support wire. Connect the wire to a secure point in the ceiling. Check the construction codes in your area.

#### WARRANTY

##### Limited Lifetime Warranty

Episode commercial Speakers have a Lifetime Limited Warranty. This warranty includes parts and labor repairs on all components found to be defective in material or workmanship under normal conditions of use. This warranty shall not apply to products which have been abused, modified or disassembled. Products to be repaired under this warranty must be returned to SnapAV or a designated service center with prior notification and an assigned return authorization number (RA).